

**MEDIUM EXPANSION FOAM NOZZLES LM 08/80 TYPE**

**OPERATING AND MAINTENANCE HANDBOOK**

**MOUNTING INSTRUCTIONS**

LM 08/80 type medium expansion foam nozzles are designed for fixed installation.

Generally the LM 08/80 type medium expansion foam nozzles are mounted in vertical position along the ceiling of the building or object to be protected..

**OPERATION OF LM 08/80 TYPE MEDIUM EXPANSION FOAM NOZZLES**

The foam premix pressure is sufficient for the operation of the LM 08/80 type medium expansion foam nozzles.

Working pressure : about 3÷5 bar at foam nozzle inlet.

Covering area: about 12 m<sup>2</sup>.

Technical data as per dwg. A51 9998/08Q.

**MAINTENANCE**

**- after each intervention:**

- flush the foam nozzles with clean water in order to eliminate any foam residual
- check that the foam nozzles and the sieves are not clogged and if necessary clean them.

**- every six months:**

- check the foam nozzles on their integrity.
- check that the foam nozzles and the sieves are not clogged and if necessary clean them.

(1.98)