

**FOAM POURERS SK-SKG-SKC TYPE**

**OPERATING AND MAINTENANCE HANDBOOK**

**MOUNTING INSTRUCTIONS**

SK, SKG and SKC type foam pourers are designed for fixed installation for connection to the foam chambers (inside the wall of the fixed roof tanks) or to the splash board on floating roof tanks.

Generally the SK, SKG and SKC type foam pourers are mounted along the top of the internal part of the side wall of fixed roof tanks (sketch A09 0200/02T) or on the splash board on floating roof tanks (sketch A09 0200/03T).

Take care that the SK, SKG and SKC type foam pourers are installed along the top inside the side wall of the fixed roof tanks in a position which exceeds of min. 50 cm. the highest possible level of the product stored inside the tank.

**OPERATION OF STO TYPE FOAM CHAMBERS**

The SK, SKG and SKC type foam pourers are provided to bring smoothly the foam jet along the tank wall on the surface of the burning liquid inside the tank without splashing on it.

**MAINTENANCE**

**- after each intervention:**

- flush the foam pourers with clean water in order to eliminate any foam residual
- check the foam pourers on their integrity

(1.98)